

## INSTRUCTIONS TO REPLACE WUNDERSTRUCTURE LEGS

1. Turn structure upside down in open “X” position:



2. Pull locking plunger back to extreme open position & wedge a 5 inch piece of wood between the outer leg & plunger handle:



**Please call 866-591-3471 with questions or issues.**

**3. Pull inner leg out as far as it will go up:**



**4. Look in top outer locking hole on outside tube for white plastic stripping material:**





**5. Rotate inner leg until you see the end of the stripping:**




**Please call 866-591-3471 with questions or issues.**


- 6. Insert pair of needle nose pliers into outer locking hole & grab the end of the stripping material:**

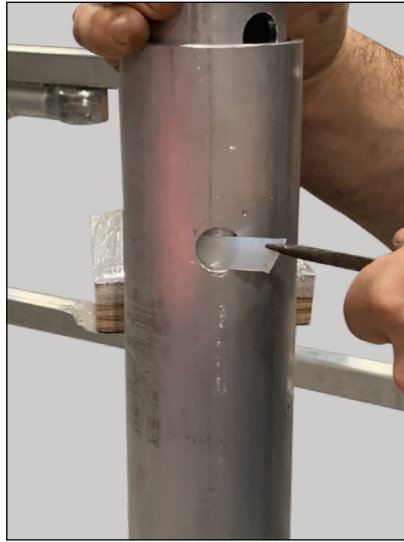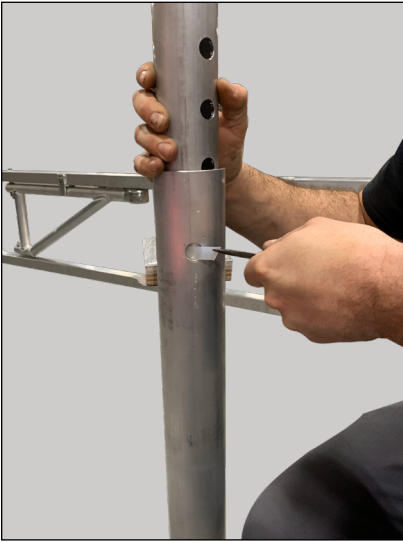

- 7. Rotate inner leg while pulling on stripping & remove strip:**

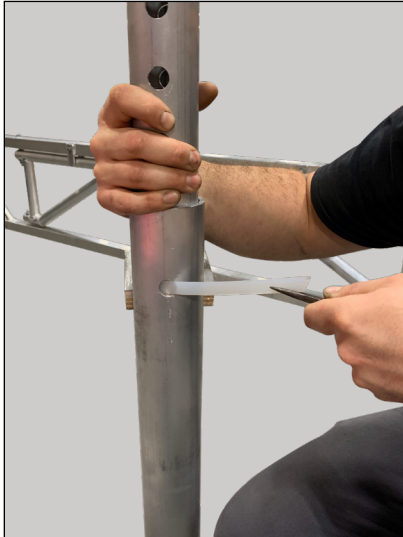

- 8. Leg will now be able to be pulled out:**



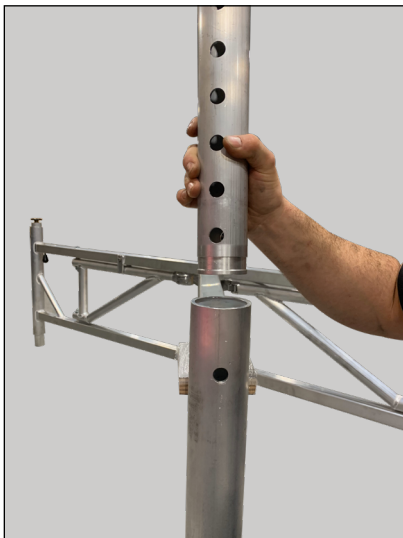


**Please call 866-591-3471 with questions or issues.**

**9. Insert new leg until groove for plastic strip is showing in top outer locking hole of outside tube:**



**10. Insert plastic stripping into hole & feed while turning leg until completely inside outer locking hole:**

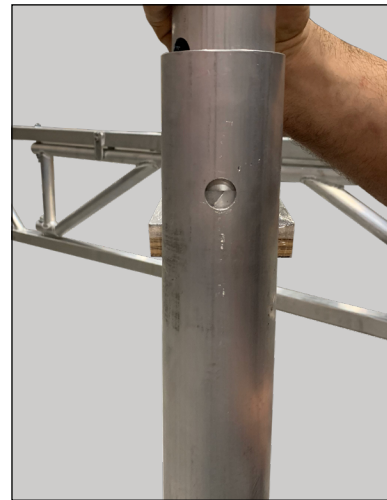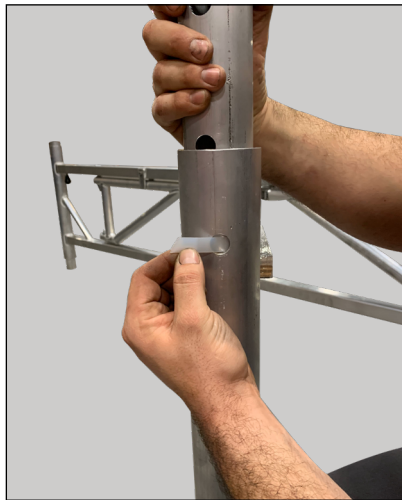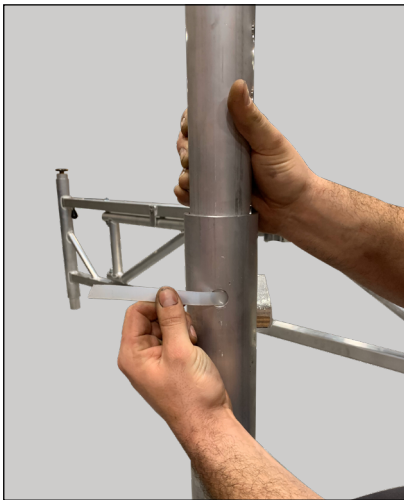

**11. Slide inner leg up & down to make sure it's working / remove wood:**



**Please call 866-591-3471 with questions or issues.**